

### Intelli-Time® Alarm Clock model 13003



#### CONTENTS

Unpacking Instructions .....	2	Troubleshooting .....	6
Package Contents .....	2	Care & Maintenance .....	6
Product Registration .....	2	Replace Intelli-Time® Battery ...	6
Features & Benefits .....	3	Specifications .....	7
Clock Setup .....	4	FCC Information .....	7
Intelli-Time® Clock .....	4	Customer Support .....	7
Set the Time & Date .....	4	Warranty .....	8
Using the Alarm Clock .....	5		

**Questions?** Contact Customer Support at (877) 221-1252 or visit [www.AcuRite.com](http://www.AcuRite.com).

**SAVE THIS MANUAL FOR FUTURE REFERENCE.**

# ACURITE®

Congratulations on your new AcuRite product. To ensure the best possible product performance, please read this manual in its entirety and retain it for future reference.

## Unpacking Instructions

Remove the protective film that is applied to the LED screen prior to using this product. Locate the tab and peel off to remove.

## Package Contents

1. Alarm clock
2. Instruction Manual

## IMPORTANT

PRODUCT MUST BE REGISTERED  
TO RECEIVE WARRANTY SERVICE

### PRODUCT REGISTRATION

Register online  
to receive 1 year  
warranty protection

[www.AcuRite.com](http://www.AcuRite.com)

SHOP NOW

SUPPORT

Support Forum


Archived Products

▶ Register a Product

# Features & Benefits



- 1. **PM Indicator**
- 2. **SNOOZE Button**
- 3. **ALARM ON Indicator**
- 4. **ALARM SET Button**
- 5. **- ADJUST DOWN Button**
- 6. **ALARM ON/OFF Switch**
- 7. **+ ADJUST UP Button**
- 8. **TIME SET Button**
- 9. **DST ON/OFF Switch**
- 10. **TIME ZONE Selection Switch**
- 11. **Intelli-Time® Battery Compartment**
- 12. **RESET Button**  
Full to factory defaults

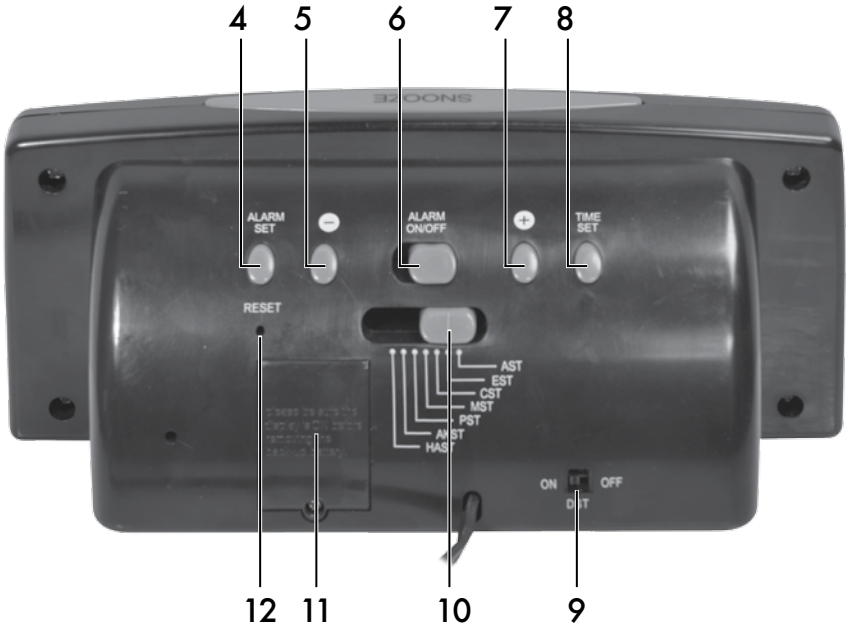

## **Clock Setup**

Plug the power cord into power outlet.

### **Intelli-Time® Clock**

Intelli-Time clock and calendar are pre-programmed to the correct time and date, and update automatically for Daylight Saving Time. All you need to do is select your time zone using the "TIME ZONE" switch.

### **Set the Time & Date**

Choose the correct time zone (HAST AKST PST MST CST EST AST) using the time zone selection switch on the back of the clock.

Set Daylight Saving Time ON or OFF using the "DST ON/OFF" switch on the back of the clock.\*

Press and hold the "TIME SET" button for 5 seconds to enter SET MODE. Once in SET MODE the preference you are currently in will blink on the clock.

To adjust the currently selected (flashing) item, press and release the "+ ADJUST UP" or "- ADJUST DOWN" buttons (press and HOLD to fast adjust). To save your adjustments, press and release the "TIME SET" button to adjust the next preference. The preference order is as follows:

**CLOCK HOUR** (Please note PM Indicator light)

**CLOCK MINUTE**

**CALENDAR MONTH**

**CALENDAR DATE**

**CALENDAR YEAR**

\*If you live in an area that observes Daylight Saving Time, DST should be set to ON, even if it is not currently Daylight Saving Time.

You will automatically exit SET MODE if no buttons are pressed for 5 seconds. Enter SET MODE any time by pressing and holding "TIME SET" button for 5 seconds.

## **Using the Alarm Clock**

### **Set the Alarm Time**

To set alarm time, press and release the "ALARM SET" button to enter ALARM SET MODE.

To adjust the currently selected (flashing) item, press and release the "+ ADJUST UP" or "- ADJUST DOWN" buttons (press and HOLD to fast adjust).

To save your adjustments, press and release the "ALARM SET" button to adjust the next preference. The preference set order is as follows:

**ALARM CLOCK HOUR** (Please note PM Indicator light)

**ALARM CLOCK MINUTE**

You will automatically exit ALARM SET MODE if no buttons are pressed for 5 seconds. Enter ALARM SET MODE at any time by pressing the "ALARM SET" button.

### **Alarm Clock ON or OFF Function**

To turn alarm on: Slide the "ALARM" switch to "ON". The Alarm On indicator will appear on the screen.

To turn alarm off: Slide the "ALARM" switch to "OFF". The Alarm On indicator will disappear from the screen.

### **Alarm Clock SNOOZE Function**

The alarm will sound for 60 minutes before turning off when no button is pressed. When the alarm is sounding, activate the 8 minute SNOOZE function by pressing the SNOOZE button on top of the alarm clock. SNOOZE function can be activated up to 10 times before the alarm will no longer sound.

# Troubleshooting

<b>Clock won't turn on or displays partial numbers</b>	<ul style="list-style-type: none"><li>Reset the unit by pressing the reset button located on the back of the clock. This will reset the alarm to the original factory settings. Time and date will need to be entered after a reset.</li></ul>
<b>Blinking Colon (dots)</b>	<ul style="list-style-type: none"><li>Blinking of the dots is a way that the seconds are counted. There is no way to stop the dots from blinking.</li></ul>
<b>If your AcuRite product does not operate properly after trying the troubleshooting steps, visit <a href="http://www.AcuRite.com">www.AcuRite.com</a> or call (877) 221-1252 for assistance.</b>	

# Care & Maintenance

## Clock Care

Clean with a soft, damp cloth. Do not use caustic cleaners or abrasives. Keep away from dust, dirt and moisture. Clean ventilation ports regularly with a gentle puff of air.

## Replace Intelli-Time Clock Battery

Intelli-Time technology is powered by a pre-installed coin-cell battery that stores the time and date settings. The battery has a shelf life of several years. Time and date will need to be entered after replacing the Intelli-Time battery. To replace the Intelli-Time battery:

1. Locate the coin cell battery compartment door on the back of the clock. Unscrew and remove the compartment cover.
2. Insert 1 x CR2032 coin cell battery into the battery compartment, as shown. Install battery with "+" positive terminal facing OUT.
3. Screw in the battery cover.



**WARNING: THIS PRODUCT CONTAINS A BUTTON-CELL BATTERY. IF SWALLOWED, IT COULD CAUSE SEVERE INJURY OR DEATH IN JUST 2 HOURS. SEEK MEDICAL ATTENTION IMMEDIATELY IF INGESTED.**



# Specifications

<b>POWER</b>	Power cord (120V)
--------------	-------------------

## FCC Information

This device complies with part 15 of FCC rules. Operation is subject to the following two conditions:

1- This device may NOT cause harmful interference

2- This device must accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## Customer Support

AcuRite customer support is committed to providing you with best-in-class service. **For assistance**, please have the model number of this product available and contact us in any of the following ways:



(877) 221-1252



info@chaney-inst.com

24/7 support at [www.AcuRite.com](http://www.AcuRite.com)

- ▶ Installation Videos
- ▶ Register your Product
- ▶ Instruction Manuals
- ▶ Support User Forum
- ▶ Replacement Parts
- ▶ Submit Feedback & Ideas

# IMPORTANT

PRODUCT MUST BE REGISTERED  
TO RECEIVE WARRANTY SERVICE

## PRODUCT REGISTRATION

Register online  
to receive 1 year  
warranty protection  
[www.AcuRite.com](http://www.AcuRite.com)

UP NOW

## SUPPORT

- Support Forum
- Archived Products
- ▶ Register a Product

## Limited One Year Warranty

At AcuRite, we proudly uphold our commitment to quality technology. Chaney Instrument Co. warrants that all products it manufactures to be of good material and workmanship, and to be free of defects when properly installed and operated for a period of one year from the date of purchase.

We recommend that you visit us at [www.AcuRite.com](http://www.AcuRite.com) for the fastest way to register your product. However, product registration does not eliminate the need to retain your original proof of purchase in order to obtain warranty benefits.

Chaney Instrument Co. warrants that all products it manufactures to be of good material and workmanship, and to be free of defects when properly installed and operated for a period of one year from the date of purchase. Remedy for breach of this warranty is limited to repair or replacement of the defective item(s). Any product which, under normal use and service, is proven to breach the warranty contained herein within ONE YEAR from date of sale will, upon examination by Chaney, and at its sole option, be repaired or replaced by Chaney. Transportation costs and charges for returned goods shall be paid for by the purchaser. Chaney hereby disclaims all responsibility for such transportation costs and charges. This

warranty will not be breached, and Chaney will give no credit for products it manufactures which have received normal wear and tear, been damaged (including by acts of nature), tampered, abused, improperly installed, damaged in shipping, or repaired or altered by others than authorized representatives of Chaney. The above-described warranty is expressly in lieu of all other warranties, express or implied, and all other warranties are hereby expressly disclaimed, including without limitation the implied warranty of merchantability and the implied warranty of fitness for a particular purpose. Chaney expressly disclaims all liability for special, consequential or incidental damages, whether arising in tort or by contract from any breach of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Chaney further disclaims all liability from personal injury relating to its products to the extent permitted by law. By acceptance of any of Chaney's products, the purchaser assumes all liability for the consequences arising from their use or misuse. No person, firm or corporation is authorized to assume for Chaney any other liability in connection with the sale of its products. Furthermore, no person, firm or corporation is authorized to modify or waive the terms of this paragraph, and the preceding paragraph, unless done in writing and signed by a duly authorized agent of Chaney. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

For in-warranty claims: Chaney Instrument Co.  
965 Wells St., Lake Geneva, WI 53147

# ACU RITE®



Weather Stations



Temperature & Humidity



Weather Alert Radio



Kitchen Thermometers & Timers



Clocks

*It's more than accurate, it's ACU RITE.*

AcuRite offers an extensive assortment of precision instruments, designed to provide you with information you can depend on to Plan your day with confidence™.

©Chaney Instrument Co. All rights reserved. AcuRite is a registered trademark of the Chaney Instrument Co., Lake Geneva, WI 53147. All other trademarks and copyrights are the property of their respective owners. AcuRite uses patented technology. Visit [www.AcuRite.com/patents](http://www.AcuRite.com/patents) for details.