



The catalog of products for the visually impaired and hard of hearing

Customer Service: 800-468-4789
Monday-Friday 9am-5pm Eastern

One Button Talking Watch Models
101025, 101026, 101041, 101018, 101052,
101038, 101053, 101061, 101078, 101083

This watch has one protruding button, two recessed buttons and one stem (crown).

- The protruding button (top right by the 2 o'clock mark) is the talking button. This button is also the sleep switch for the talking functions of this watch. If the watch does not talk when pressing this button, press and hold the button for up to 10 seconds until it emits a short beep. Release the button and press and release it again and the watch is now awake and ready to be set.

For the purposes of these instructions, we will refer to the buttons as follows:

TR - This is the protruding button. It is located at the top right of the rim, at the 2 o'clock position. This button, when pressed, will tell you the current time.

BR – This is a recessed button at the bottom right of the rim, at the 4 o'clock position. This button is used to change the minutes.

BL – This is a recessed button at the bottom left of the rim, at the 8 o'clock position. This button is used to change the hour.

** Note: If watch is not talking, the voice battery saver option is engaged. Press in the talking (TR/2 O'Clock) button for up to 10 seconds and the watch should emit beep. Talking watch will now function properly.



The catalog of products for the visually impaired and hard of hearing

To set the time:

The analog time and the talking time run independently of each other and therefore, need to be set separately.

To set the analog time, pull the stem (crown) out (located at the 3 o'clock position).

There may be a red or yellow battery saver tab that needs to be removed from the stem (crown) before setting the time.

- Note: When the stem/crown is out the minute hand wobbles, this protects the watch movements while the watch is in transit. Once the watch face has been set and the stem (crown) has been pushed in the hands will no longer wobble and they will keep the time properly.

Once the flat plastic U shaped battery saver tab has been removed from the stem (crown), you may turn the stem to the correct time and push the stem back in. The second hand (when applicable) should start moving and the watch face is now set.

To set the talking time, you will need a paperclip, the tip of a pen, or some sort of small, pointed object to push the recessed buttons in.

Press the BL recessed button repeatedly to change the hours.

Once the correct hour has been announced, press the BR recessed button repeatedly to change the minutes.

Once the correct minute has been announced, press the TR button to hear the time.

This watch takes two different batteries:

Voice– CR2032

Analog Face - SR262SW

It is recommended that a professional jeweler change the batteries.