

## INSTRUCTIONS FOR USING THE WILSON™

Congratulations on purchasing **The Wilson™**, a state-of-the-art digital voice recorder which can be used as a USB memory device too.

The following are instructions for its use:

### Batteries

Requires two (2) AAA batteries (not included). To insert batteries, remove the battery cover from the back of **The Wilson™** and insert batteries with negative (-) end against the springs. Replace the battery cover. Once the batteries have been inserted and turn ON the power slide switch, **The Wilson™** will beep twice and LED blinking once to indicate it is operational.

*Note:* When batteries are removed and replaced, **The Wilson™** will retain all existing messages.

### Recording

To record, press the Record button (REC). After a beep, speak in the direction of **The Wilson™**. A LED light will flash indicating that **The Wilson™** is recording. To stop recording, press either the Play/Stop button **The Wilson™** will beep twice, indicating that the recording has stopped.

Alternatively, **The Wilson™** will automatically delete the oldest message if the memory is full.

**To Pause The Recording:** Simply press the record (REC) button again the LED light will stop blinking indicating that the recording has been paused. To resume recording press the button again the LED will begin flashing again indication that the recording has been resumed.

You can record messages of total length / recording time of up to 8 hours.

### Check Messages (CM Key)

Press the CM key, located on the side of the unit and it will announce how many messages are stored on **The Wilson™**

### Play Back

To play back your message, simply press the Play/Stop button.

To stop play back, press the Play/Stop button while playing. Once a message has been played back in its entirety, **The Wilson™** will beep once and LED blinking once.

If more than one message has been recorded, **The Wilson™** will play back the most recently recorded message first. Each time the Play/Stop button is pressed thereafter, **The Wilson™** will play all recorded messages oldest to newest.

**To Pause the Playback:** Simply press the Play/Stop button again the LED light will stop blinking indicating that the playback has been paused.

To resume play back press the button again the LED will begin flashing again indicating that the playback has been resumed.

Play the selected message

Pressed & hold the CM button to hear message count "one, two, three..etc." release the CM button when you have reached the message you want to play back.

### Deleting Messages

To delete a message, press the Delete button (DEL) twice in quick succession while playing the message you wish to delete. The Wilson™ will beep twice to indicate the message is being deleted.

#### Delete All Messages

To delete all messages, press the Delete (DEL) buttons for 4 times, there is a voice to asking <Delete All>, press the Delete (DEL) button again to confirm delete all messages. **The Wilson™** will be deleted and will be 3 beeps to indicate all messages are deleted.

### Volume Control

(Digital Volume control) When you install the batteries (not included) the volume is then set to mid-level, push the (VOL) button until desired volume is set.



### A Word About Batteries

Always use high quality batteries in the recorder - low quality batteries will cause the low battery indication beep to go off. *Never use rechargeable batteries.*

### DISCLAIMER

No liability is assumed, directly or indirectly, for any damage of loss resulting from the use of **The Wilson™**. The manufacturer assumes no responsibility for improper use, damage, repairs defects, battery use or replacement, or any other costs. Repair or replacement, as provided under the Limited Warranty, shall be the exclusive remedy of the manufacturer. **Talk to the Wilson, LLC.** shall not be liable for incidental or consequential damages resulting from the use of **The Wilson™** or arising out of any breach of any express or implied warranty with respect to **The Wilson™**

### LIMITED WARRANTY

Talk to The Wilson, LLC. grants a limited warranty for **The Wilson™** for 1 year from the date of purchase. Please retain the sales receipt, as proof of purchase is required.

During the warranty period, **The Wilson™** is eligible for repair or replacement in the event of defects in materials or workmanship. In such cases, the defective product will be repaired or replaced as determined by Talk to the Wilson, LLC, in its sole discretion. Notwithstanding the preceding, this limited warranty does not cover damages caused by accident, improper use of unauthorized modifications. In addition, this limited warranty does not cover expendable materials and defects which constitute normal wear and tear.

Please contact Talk to the Wilson, LLC via our website ([www.talktothewilson.com](http://www.talktothewilson.com)) for limited warranty questions or service. Please note Retailer is not responsible for warranty claims.

Warranty Claims to be mailed to:

Talk To The Wilson. LLC.  
10105 E. Via Linda #103 - 196  
Scottsdale, AZ 85258