

# Front page in English, Canadian French, Spanish

## iLuv SmartShaker®3

### WHAT YOU NEED

- Any device with iOS 10 / Android 5.0 or above
- A power charger or power bank

### WHAT'S INCLUDED

- SmartShaker 3
- USB-A to USB-C Charging Cable
- User Manual

### DEVICE SETUP

#### 1. Charge the SmartShaker 3

Connect the charging cable to the SmartShaker 3 and a USB-C power charger. The 4 LEDs on the SmartShaker 3 will continuously blink white indicating that the device is charging. The 4 LEDs will stop blinking once charging is complete.

### APP OPERATIONS

#### Main Page

Tap here to edit an alarm

Tap here to add an alarm

#### Battery Status

Bluetooth Status

#### Setting Menu

Toggle the On/Off of Individual Alarm

#### Delete Alarms

### DEVICE SPECIFICATION

#### Dimension and weight

Dimensions: 3.9" x 3.9" x 1.3" (100mm x 100mm x 34mm)

Weight: 170g

#### Compatibility

iOS devices with iOS 10 or above

Android devices with Android 5.0 or above

#### Connectivity

Bluetooth 5.2

#### Frequency, power and coverage

Bluetooth® frequency: 2400 - 2480 MHz

Max output power: 2.5 mW (4 dBm)

Bluetooth® coverage: Up to 15 m (49.2 ft)

Coverage can be reduced by thick walls and large objects

#### Cables and connections

Cable length: 1 m (3.3 ft)

Connects: USB-A to USB-C

#### Environmental requirements

For indoor use only

Temperature: 15° - 35°C (59° - 95°F)

Humidity: 5% - 95% (non-condensing)

#### What's included

SmartShaker 3 Main unit

Charging cable

User Manual

### 2. Install the SmartShaker 3 App

Search and download "SmartShaker 3" on the Apple App Store or Google Play Store.

\*\* Please do not install SmartShaker+ App

### 3. Turn on Bluetooth on your mobile device.

### 4. Launch the SmartShaker 3 App and follow the instructions.

### DEVICE INTRODUCTION

Alarm Switch ON/OFF

Reset Button

Snooze Button

LED Indicator

USB-C Port

### Snooze Button

Press once to check battery

Press once to snooze alarm if alarm is active

### FAQS

#### 1. In the app stores which app is for SmartShaker 3?

SmartShaker 3, not SmartShaker+

#### 2. How long will the SmartShaker 3 continue to vibrate if left untouched?

15 minutes

#### 3. How can I snooze the alarm?

Press the snooze button on the device or press the snooze button on the app.

#### 4. Can I customize the timing for the snooze interval?

The default is 9 minutes however you can edit the timing by going to Menu -> Time Setting -> Snooze Interval.

#### 5. How can I stop the alarm?

Slide the Alarm button to off or press the stop button on the App.

#### 6. How can I enable alerts for incoming calls?

Go to Menu -> Alert Setting and then toggle the "Alert for phone calls". Please make sure the SmartShaker 3 is on.

#### 7. How can I enable alerts for incoming messages?

Go to Menu -> Alert Setting and then toggle the "Alert for SMS Messages". Please make sure the SmartShaker 3 is on.

### TROUBLESHOOTING

#### 1. My SmartShaker 3 isn't responding.

Plug the SmartShaker 3 to a power source to make sure the device is fully charged. You can check the battery level by pressing the snooze button.

#### 2. My app isn't connecting to my SmartShaker 3.

1. Make sure Bluetooth is turned on on your phone. 2. Place the SmartShaker 3 and the connected phone closely together.

### On/Off Switch

Off: Disable alerts for all incoming calls, messages and alarms

On: Enable alerts for all incoming calls, messages and alarms

### Reset Hole

Reset for SmartShaker 3

### USB-C Charging Port

Connected to any charging adapter / power bank / PC with 5V 1A output

### LED

Solid Color Light | Blinking Color Light | Light Off

All Blinking Blue Pairing mode

All Blinking Green Incoming Call/Message\*

All Blinking White Active alarm\*

All Solid Blue Firmware Update Mode

\*LED settings must be enabled on the app.

### Battery LED Indication after pressing snooze

75 - 100% | 50 - 75% | 25 - 50% | 10 - 25% | < 10%

### LED status when in charging

75 - 100% | 50 - 75% | 25 - 50% | 10 - 25% | < 10%

\*All LED will be off after charging finished.

### If this cannot help, try below:

1. Force close the SmartShaker 3 App.

2. Toggle Bluetooth on your mobile.

3. Restart your SmartShaker 3.

4. Open your app again.

### NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Health, Sun Creative Technology declares that the radio equipment type SmartShaker 3 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: [www.iluv.com](http://www.iluv.com)

### TROUBLE SHOOTING:

When the battery is completely drained while not in use for a long period of time, by charging it a few times it will restore its normal charging process. Repeat the charging process if the charging indicator does not respond or is turned off after a few minutes.

DEFERRANCE: Lorsque la pile est complètement déchargée pendant une période de temps prolongée, tentez de la charger quelques fois afin qu'elle se remette à charger normalement. Répétez le processus de chargement si l'indicateur de charge ne répond pas ou s'il s'éteint après quelques minutes.

ONE YEAR LIMITED WARRANTY

GARANTEE LIMITED TO EU AN

© Greenworks® | eUSGS

Printed in China

# Rear page in German, Danish, Spanish

## iLuv SmartShaker®3

### WAS SIE BENÖTIGEN

- Jedes Gerät mit iOS 10/Android 5.0 oder höher
- Ein Ladegerät oder eine Power Bank

### WAS INBEGRIFFEN IST

- SmartShaker 3
- USB-A zu USB-C Ladekabel
- Bedienungsanleitung

### GERÄTKONFIGURATION

#### 1. Laden Sie den SmartShaker 3 auf

Schließen Sie das Ladekabel an den SmartShaker 3 und ein USB-C Ladegerät an. Die 4 LEDs am SmartShaker 3 blinken kontinuierlich weiß, um anzuzeigen, dass das Gerät aufgeladen wird. Die 4 LEDs hören auf zu blinken, sobald der Ladegang abgeschlossen ist.

### GERÄTSPEZIFIKATION

#### Abmessungen und Gewicht

Abmessungen: 100 mm x 100 mm x 34 mm (3,9" x 3,9" x 1,3")

Gewicht: 170 g

#### Kompatibilität

iOS-Geräte mit iOS 10 oder höher

Android-Geräte mit Android 5.0 oder höher

#### Konnektivität

Bluetooth 5.2

#### Frequenz, Leistung und Überspannung

Bluetooth®-Frequenz: 2400 - 2480 MHz

Max. Ausgangsleistung: 2,5 mW (4 dBm)

Bluetooth®-Reichweite: Bis zu 15 m (49,2 ft)

Die Abdeckung kann durch dicke Wände und große Gegenstände verringert werden.

#### Strom und Batterie

Batterieleistung: 1 x 1500 mAh Li-Ionen-Polymerbatterie

Energieverbrauch: Aktiv mit starken Vibrationen < 900 mA Leerlaufposition < 200 uA

Betriebzeit: Bis zu 14 Tage pro Ladung

Ladezeit: Bis zu 1 Stunde 45 Minuten bei 5 V 1000 mA

#### Kabel und Anschlüsse

Kabellänge: 1 m (3,3 ft)

Anschlüsse: USB-A zu USB-C

#### Umgabungsanforderungen

Nur für den Innengebrauch

Temperatur: 15° - 35°C (59° - 95°F)

Relative Luftfeuchtigkeit: 5% - 95% (nicht kondensierend)

### Was inbegriffen ist

SmartShaker 3 Hauptgerät

Aufladekabel

Handbuch

### Batterie-Status

Bluetooth-Status

Einstellungsmenü

Alarmlöschen

### APP-BETRIEB

#### Hauptseite

Tippen Sie hier, um einen Alarm zu bearbeiten

Tippen Sie hier, um einen Alarm hinzuzufügen

#### Batteriestatus

Bluetooth-Status

Einstellungsmenü

Alarmlöschen

### APP-FUNKTIONEN

#### Hauptseite

Tippen Sie hier, um einen Alarm zu bearbeiten

Tippen Sie hier, um einen Alarm hinzuzufügen

#### Batteriestatus

Bluetooth-Status

Einstellungsmenü

Alarmlöschen

### ENHEDSSPEZIFIKATION

#### Dimension og vægt

Dimensioner: 3,9" x 3,9" x 1,3" (100 mm x 100 mm x 34 mm)

Vægt: 170 g

#### Kompatibilitet

iOS-enheder med iOS 10 eller nyere

Android-enheder med Android 5.0 eller nyere

#### Forbindelse

Bluetooth 5.2

#### Frekvens, effekt og overforbrug

Bluetooth®-frekvens: 2400 - 2480 MHz

Max. udgangseffekt: 2,5 mW (4 dBm)

Bluetooth®-dækning: Op til 15 m (49,2 ft)