




11 Familiarize yourself with the keypad.

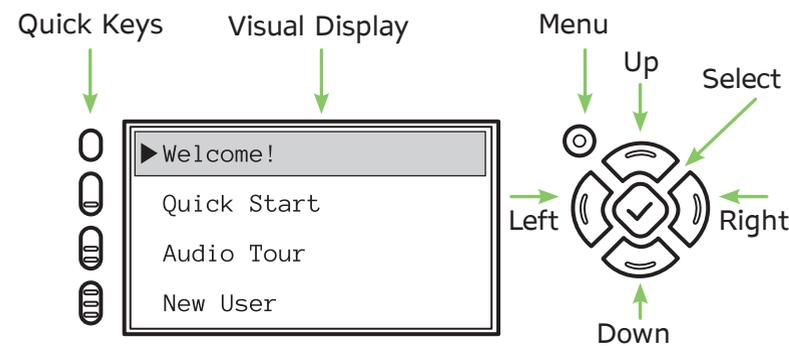


12 Use the **Down** button to navigate the menu to find "Audio Tour." Press **Select** to play.

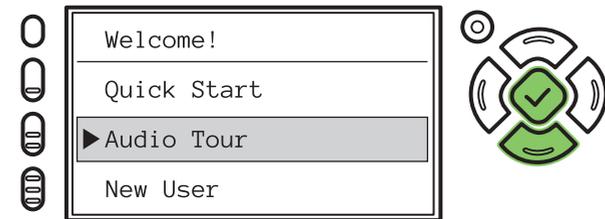

13 Press the **Select** button to pause the tour. Press the **Menu** button to exit the tour.

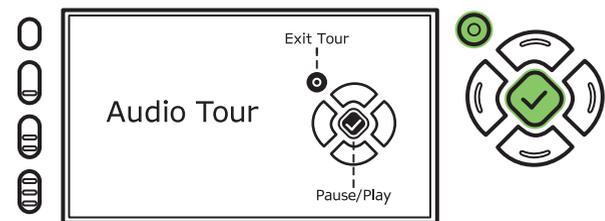

14 After the tour, select "Quick Start" in the Welcome Menu to begin braille entry or select "New User" to create a user account.

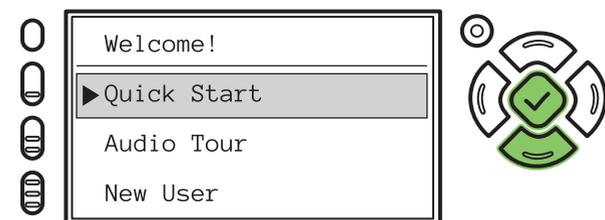

Hello there!

Follow these instructions to set up your Perkins SMART Brailer®.



You may require some assistance to install the battery.

After completing steps 1-8 to install the rechargeable battery, please leave it plugged in for eight hours to fully charge.


It is fine to begin using your Perkins SMART Brailer® while it is plugged in and charging.

PERKINS
SMART
BRAILLER®

Adult Assembly Required
Small Phillips head
screwdriver required
CAUTION: Keep small
parts away from children
during assembly.


1

Remove Perkins SMART Brailer® from box.

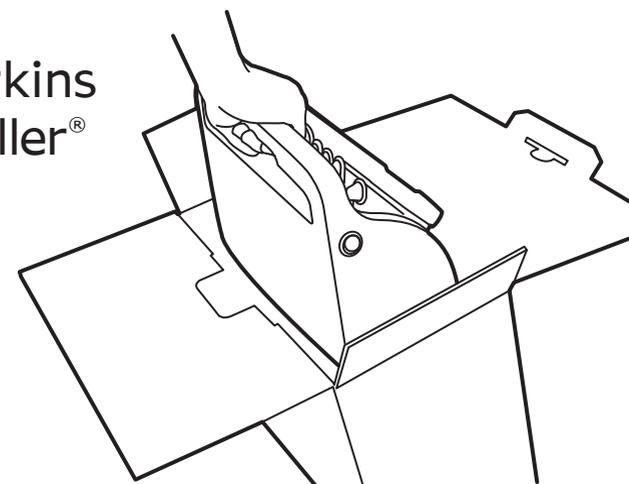


2

Remove the battery from the brailer box.

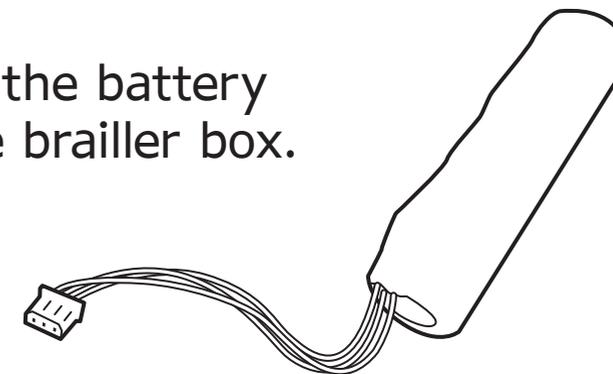


3

Locate battery door on bottom, unscrew the two screws and remove door.

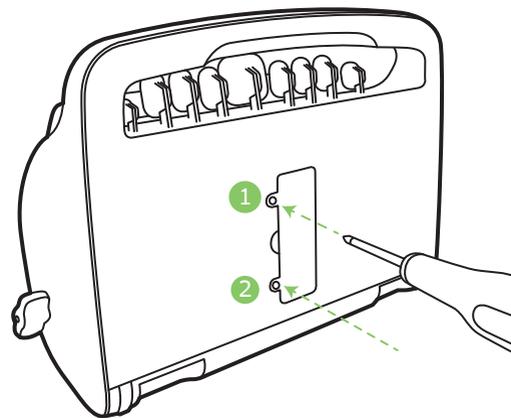


4

Connect battery power plug in the right corner of the battery compartment. The plug fits into the port in only one way.

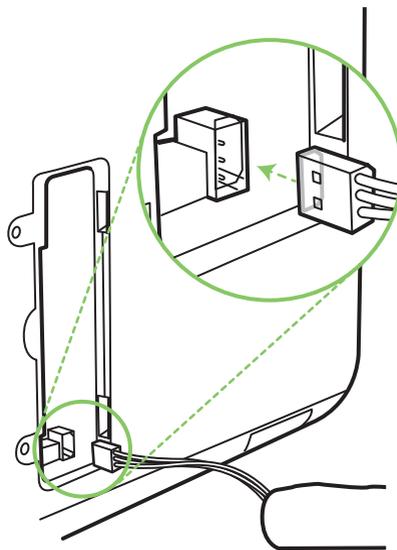


7

Locate power adapter in box and plug adapter into wall power socket.

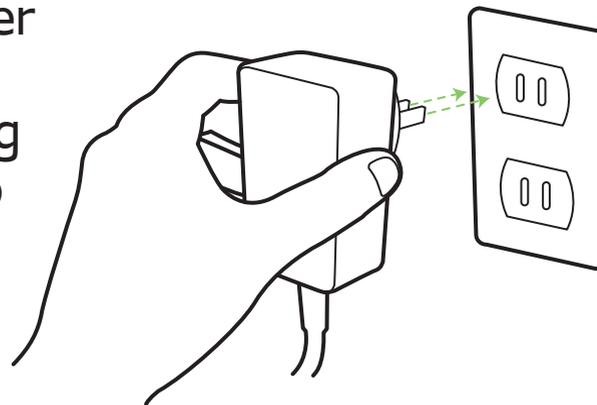


8

Plug adaptor cord into its port at the left rear side of braille.

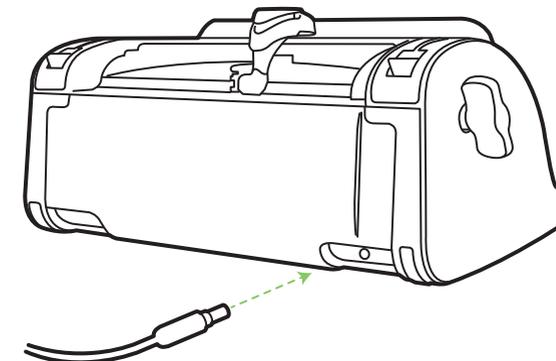


5

Once connected, place the battery in the compartment and hold in place.

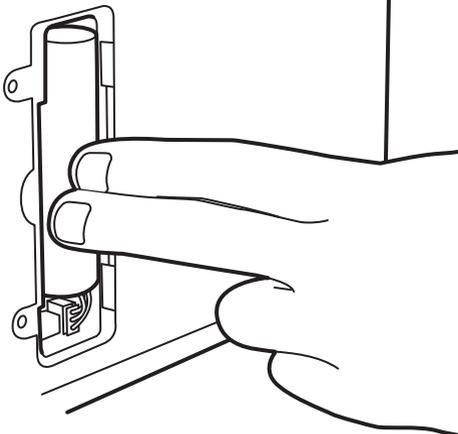


6

Close the battery cover, first inserting the tabs into the slots on the right. Screw the two screws back in place.

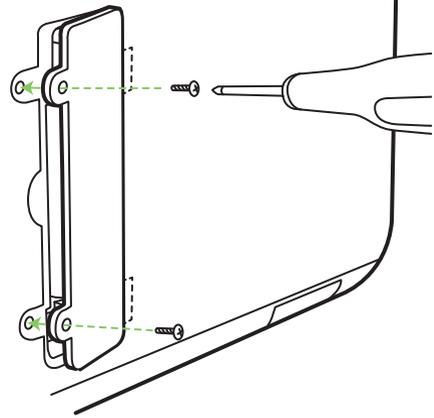

9

Turn on the braille using the switch on the lower right side. Listen for the beep.

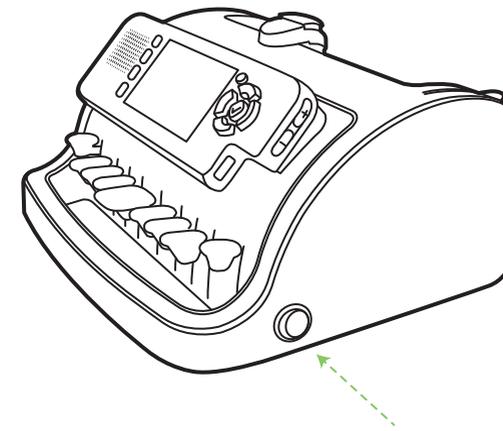

10

Wait 25 seconds for the software to load. When you hear "Welcome" you are in the Welcome Menu.

